




**Impactor**  
**00-1193-055-00**

Assembly/Disassembly  
Instructions

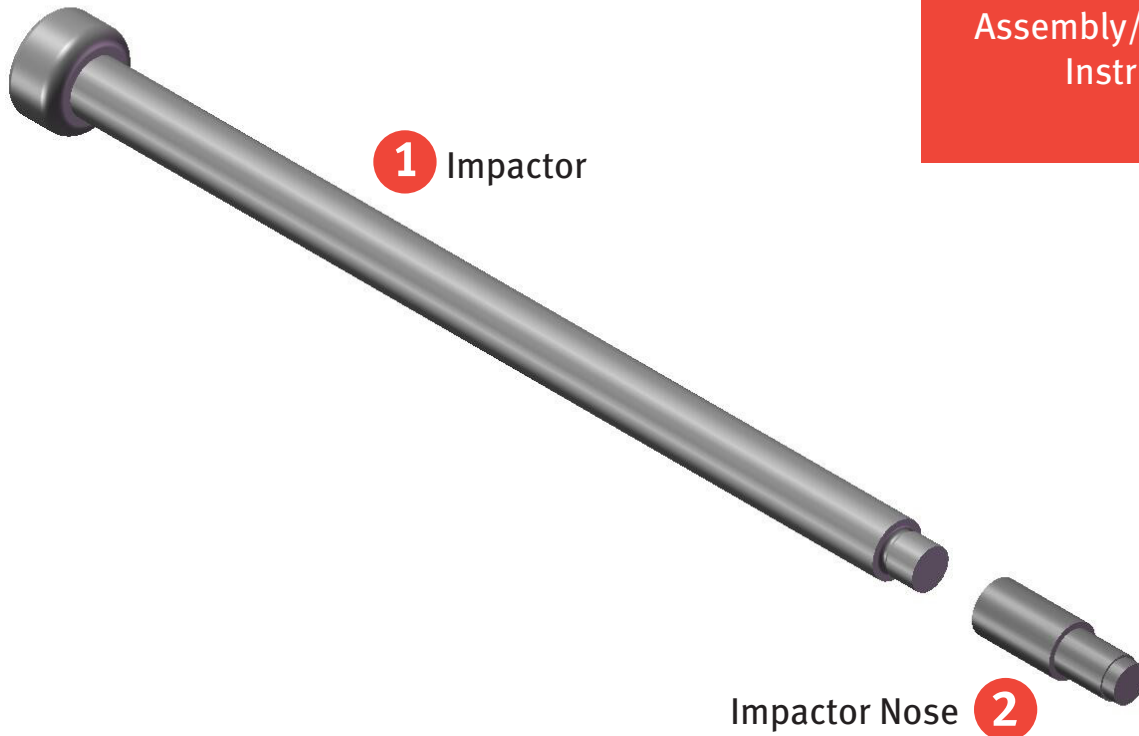

## Disassembly Instructions for Impactor

1. Unscrew the Impactor Nose **2** out of the Impactor **1**.
2. End of disassembly.

## Assembly Instructions for Impactor

1. Thread the Impactor Nose **2** into the Impactor **1** until it is fastened completely.
2. End of assembly.



97-0000-503-00 1003-T30 Printed in USA ©2010 Zimmer, Inc.